

Owners Manual for TP4X Mister



Unit includes TP 4X machine, 17' Solution hose, Spray gun w/ 2 tips- stainless steel fine mist (sprays .026gpm or 80 microns) is on the gun and a brass tip (sprays .08 gpm or 100 microns) is included in the box.

(cart shown is purchased separately)

PRIOR TO USING THIS MACHINE, MAKE SURE THAT YOU HAVE READ, AND UNDERSTAND THE SAFETY AND OPERATING INSTRUCTIONS FOR THIS MACHINE.

SAFETY INSTRUCTIONS


Every electrical device must be used for its particular function only, respecting the manufacturer's instructions. Failure to adhere to these instructions could result in serious bodily injury to the operator (shock, electrocution, etc.). Please read the following safety instructions carefully and ensure that you understand them prior to using the machine.

- Before putting the machine's plug in the wall socket, check that the voltage available is the same indicated on the label of the machine.
- Be sure that the electrical system is well grounded and that it has a GFI.
- Verify that the cable plug is the same as the outlet.
- Do not use adapters or multiple sockets
- If any electrical extension is used, ensure it is the correct gauge of wire and make sure it is watertight.
- Take care of the electrical cable. Do not repair the cable in case of tears, but replace it with a new one.
- Do not pull the cable to drag the machine or to pull the plug out. Pull the plug out only when the machine is switched off.
- Do not handle the plug with wet hands.
- Do not spray water near electrical outlets. Do not use the machine to spray or to suck dust, corrosive liquids (acids or bases) and explosive or flammable liquids.
- Do not use the machine in an explosive atmosphere.
- Do not let the machine be used by children and people unable to understand the danger connected with the use of electrical power.
- In case of abnormal working (very noisy motor, pump not running, extreme temperature rise, or other suspicious signals) switch off the machine and pull the plug out.
- After using, store the machine, well cleaned, in a cool and dry place.



Attention: All electrical repairs must be performed by qualified personal only!

SETTING UP & USING YOUR MISTER

1. Remove the Unit, hose, spray gun and extra tip from box.
2. Remove the 2 spring clips holding the upper tank to the lower tank

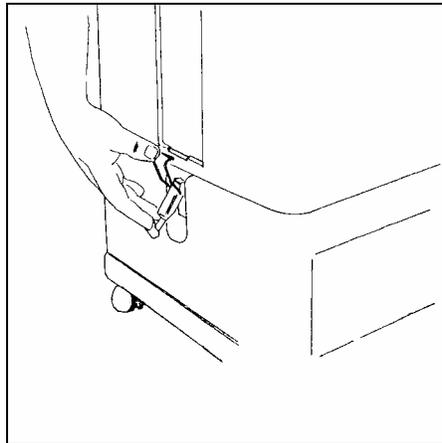

3. Fill the solution tank with 1 Gallon cold or warm water through the filling hole and then reconnect the tanks and fasten the springs.

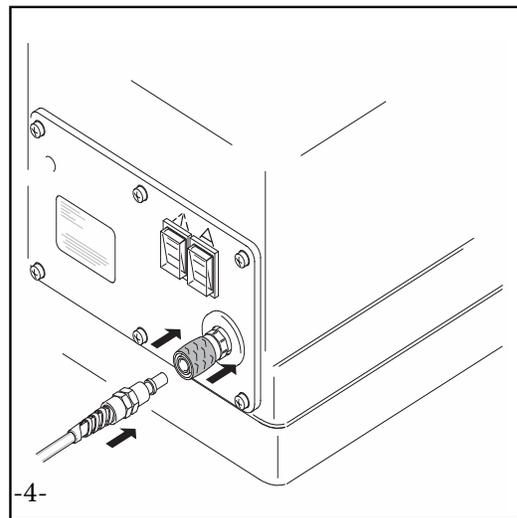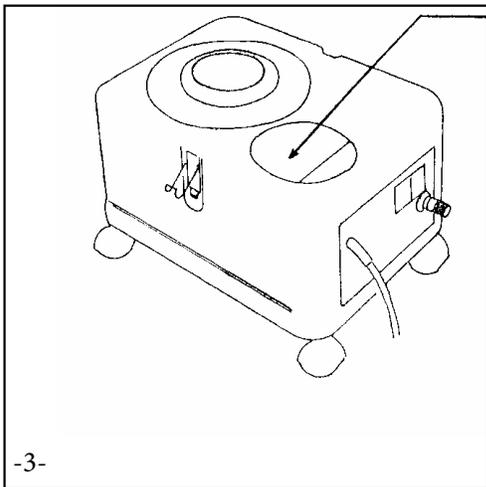

4. Connect the spray hose & gun to the machine. Verify the s/s tip is in the vertical position for optimal spray pattern. Plug the machine in, turn on and run the water through the unit. This helps remove any particles left in the unit, hose or gun during the manufacturing process
5. If the spray pattern is not smooth, remove the brass nut and remove tip. Blow out the tip (with compressed air if possible) replace tip, ensuring it is in the vertical position, replace brass nut and continue.
6. If the spray pattern is too fine, replace the stainless steel tip with the brass tip for a heavier spray

MAINTENANCE

1. After every use, before storing the machine, remove top tank and dump any remaining solution. Rinse tank, add clean water and run through hose and gun to flush any remaining solution.
2. After every use, store the machine in a cool and dry place with the recovery dome off. This will ensure that no water evaporates through the vacuum motor causing any damage.
3. Periodically clean (at least every 2 months) the water filter, removing it from the machine and rinsing it under warm water

AVAILABLE ACCESSORIES



**P/N 911162
EM-3 CART WITH
GARBAGE RECEPTACLE**



**P/N 1500C125
TP 4X TRANSPORT
CART**



**P/N 15715L100
33' SOLUTION HOSE**



**P/N 15803-EXT
16" EXTENSION
WAND FOR GUN**

CARPET SPOTTER ACCESSORIES

You can use your TP4X Mister as a carpet spotter with the addition of the following accessories:



**P/N 13008PE
8' Vacuum & Solution Hose**

**P/N 1112PPE
Hand Tool**